












## Wet Acid Battery Packing Instructions – Kit EAA-WABN (Ground Shipments)

1	Ensure that the battery terminals are secured to prevent the battery from short-circuiting. Electrical tape may be used to secure the ends of the terminals.	
2	Place the battery in the plastic bag ( <b>provided</b> ) and seal the bag.	
3	Place the largest honeycomb insert ( <b>provided</b> ) on the bottom of the box. Place the battery in the center of the box ( <b>provided</b> ). Fill any void space with the other honeycomb ( <b>provided</b> ) to prevent movement. It should be an equal amount on each side. The smallest honeycomb piece goes on top of the battery, in between the terminals to prevent damage in transit.	
4	Ensure the box includes orientation arrows. They must be pointing up in accordance with the battery & label placement.	
5	Place the Class 8 label ( <b>provided</b> ) on the box. Be sure it is visible and not covering any other marks or labels.	

# Wet Acid Battery Packing Instructions – Kit EAA-WABN

2/2

6	Place the Return Authorization Paperwork in the box. Parts cannot be credited without the requisite paperwork. Seal the box with the precut tape ( <b>provided</b> ).	
7	Generate shipper and shipping paperwork utilizing your UPS Hazardous Materials software on your computer.	
8	Attach the packing slip envelope to the top of the completed package. Provide at least one (1) copy of the hazardous declaration and Emergency Response Guide 154 ( <b>provided</b> ) to the driver.	

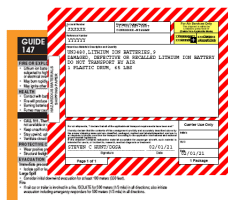

Questions? Please contact Tina Martin at +1 (586) 582-5833 or James Brozovich at +1 (586) 582-5835