



Wet Acid Battery Packing Instructions – Kit EAA-WAB (Ground Shipments)

1	Ensure that the battery terminals are secured to prevent the battery from short-circuiting. Electrical tape may be used to secure the ends of the terminals.	
2	Place the battery in the plastic bag (provided) and seal the bag.	
3	Place the largest honeycomb insert (provided) on the bottom of the box. Place the battery in the center of the box (provided). Fill any void space with the other honeycomb (provided) to prevent movement. It should be an equal amount on each side. The smallest honeycomb piece goes on top of the battery, in between the terminals to prevent damage in transit.	
4	Ensure the box includes orientation arrows. They must be pointing up in accordance with the battery & label placement.	
5	Place the Class 8 label (provided) on the box. Be sure it is visible and not covering any other marks or labels.	
6	Place the Return Authorization Paperwork in the box. Parts cannot be credited without the requisite paperwork. Seal the box with the precut tape (provided).	


Wet Acid Battery Packing Instructions – Kit EAA-WAB

2/2

7 Generate shipper and shipping paperwork utilizing your UPS Hazardous Materials software on your computer.



8 Attach the packing slip envelope to the top of the completed package. Provide at least one (1) copy of the hazardous declaration and Emergency Response Guide 154 (**provided**) to the driver.

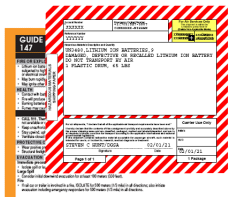

Questions? Please contact Tina Martin at +1 (586) 582-5833 or James Brozovich at +1 (586) 582-5835