




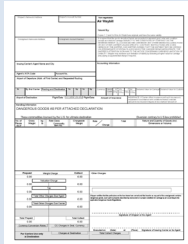






Packing Instructions Lithium Ion Batteries – Kit EAA-LBC CONTAINED IN EQUIPMENT

1	Place the article (Lithium Ion Battery Contained in Equipment) inside the pink bubble bag (provided) and seal the bag.	
2	Assemble the pre-labeled fiberboard box (provided) using the brown fiber tape (provided). NOTE: Drawing is NOT to scale.	
3	Wrap the pink bubble bag in the bubble wrap (provided) and place in the fiberboard box. Add additional cushioning if needed, to secure the part inside the box. Seal the fiberboard box with the precut tape (provided).	
4	Ensure the fiberboard box includes this label (shown).	
5	Place the Return Authorization Paperwork (if any) in the box. Parts cannot be credited without the requisite paperwork. Seal the box with the precut tape (provided). NOTE: Drawing is NOT to scale.	
6	Generate shipper and shipping paperwork utilizing your UPS Hazardous Materials software on your computer.	

Packing Instructions Lithium Batteries – Kit EAA-LBC CONTAINED IN EQUIPMENT

2/2

- 8 Attach the packing slip envelope to the top of the completed package. Provide at least three (3) copies of the DGD and Emergency Response Guide 147 (**provided**) to the driver.

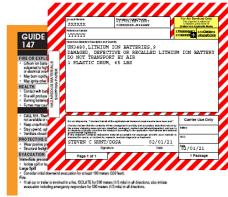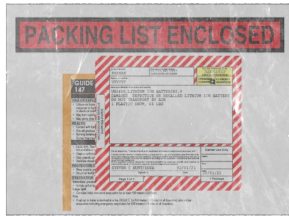

Questions? Please contact Tina Martin at +1 (586) 582-5833 or James Brozovich at +1 (586) 582-5835