



Seat-Belt Pretensioner Packing Instructions – Kit EAA-SB-A – Air Shipments

1	Ensure that the initiator charge terminals are secured to prevent them from short-circuiting.	
2	Place the device in the plastic bag provided. Secure the plastic bag using the zip-tie. (provided)	
3	Assemble the pre-labeled UN approved fiberboard box provided. Confirm that the fiberboard box is pre-labeled. NOTE: the pre-labeled box must be used! Damaged or used packaging may not be used.	
4	Place the plastic bag containing the seatbelt pretensioner in the UN approved & pre-labeled fiberboard box. (provided)	
5	Secure the seatbelt pretensioner within the UN approved & pre-labeled box using the packing material (bubble wrap) provided. Add additional packing material if needed. Device should not rattle during transportation.	
6	Obtain copy of the repair order pertaining to the part you are taking from the dealership to include inside the box. Close & secure the box with the UN Specification tape. (provided)	


Seat-Belt Pretensioner Packing Instructions – Kit EAA-SB – Air Shipments

2/2

7 Generate shipper and shipping paperwork utilizing your UPS Worldship software on your computer.



8 Attach the packing slip envelope to the top of the completed package. Provide at least three (3) copies of the hazardous declaration and Emergency Response Guide 171 (**provided**) to the driver.

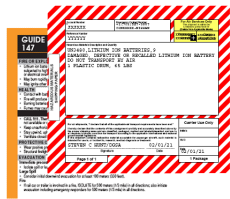

Questions? Please contact Tina Martin at +1 (586) 582-5833 or James Brozovich at +1 (586) 582-5835